


Quick User Guide

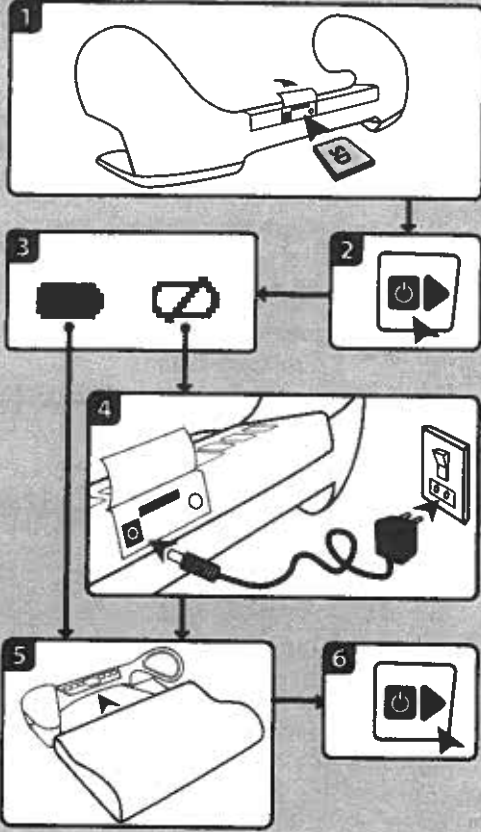

Copyright © 2007 Maysound, all rights reserved. Maysound is a registered trademark of Maysound ApS.

Quick Reference Guide



	<ul style="list-style-type: none">■ Turn power on, play and stop. Hold down for 2 sec. to turn power off.■ Tænd, afspil og stop. Tryk i 2 sekunder for at slukke.
	<ul style="list-style-type: none">■ Sound volume step down.■ Lydstyrke ned.
	<ul style="list-style-type: none">■ Sound volume step up.■ Lydstyrke op.
	<ul style="list-style-type: none">■ Skip to previous track.■ Skift til forrige nummer.
	<ul style="list-style-type: none">■ Skip to next track.■ Skift til næste nummer.
	<ul style="list-style-type: none">■ In stop mode: Play after x minutes. In play mode: Stop after x minutes.■ I stop-tilstand: Afspiller efter x min. I afspil-tilstand: Stopper efter x min.

Copyright © 2007 Maysound, all rights reserved. Maysound is a registered trademark of Maysound ApS.